



4.5FT TRAMPOLINE INSTRUCTION MANUAL



Please read these instructions carefully before use and keep for future reference

WARNING

CHOKING HAZARD - SMALL PARTS NOT SUITABLE FOR CHILDREN UNDER 3 YEARS OF AGE


For use by children aged 3 to 6 years ONLY.

Maximum user weight 100lbs.

Adult Assembly Required: Contains small parts with sharp points and edges

Parts List

PARTS	QTY	ITEM
Frame Cover w/Skirt	1	A
Jump mat/Safety net/Tied rope	1	B
Springs (Quantity varies based on model)	30-42	C
Screws	30	D
Screw Driver	1	E
Top Rail	6	F
Lower Enclosure Pole	6	G
Upper Enclosure Pole	6	H
Plain(lower) Foam	6	I
Embossed(upper) Foam	6	J
Leg Tube	6	K

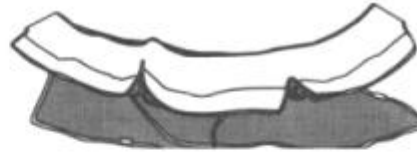


Ⓐ: Frame Cover with Sewn-on Skirt



Ⓑ: Jump mat/Safety net/Tied rope

 
Ⓚ Leg Tube



Ⓜ Embossed (upper) Foam Tube



 
Ⓨ Plain (lower) Foam Tube



Ⓡ Upper Enclosure Pole



Ⓛ Lower Enclosure Pole

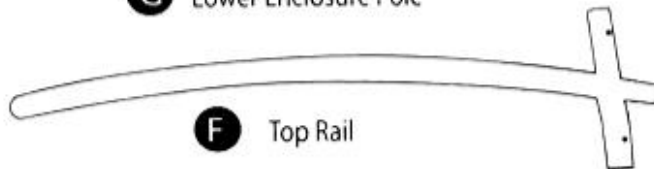

Ⓛ Top Rail



Ⓒ Spring



Ⓓ Screws




Ⓔ Screw Driver



Assembly Instructions




1. Begin by assembling 2 of the top rails together to form an arc.

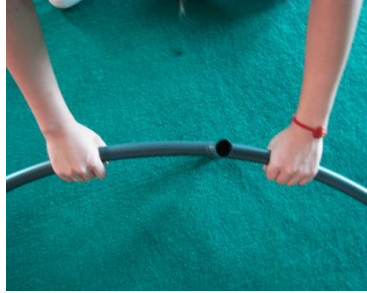

2. Continue building a circle by adding the remaining 4 top rails to the arc made in step 1.



3. Joining 2 loose ends of the circle together may require you to stand the frame on edge and press down

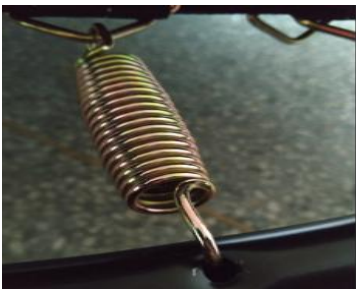


4. With stitching portion facing down, lay jumping mat inside frame and attach a spring (using the smaller spring hooks) into the triangle ring on the mat. Then attach spring (using the longer hook to the frame). For ease of installation use a spring hook.



5. Repeat this step directly across from where you attached first spring. Then attach two more springs half distance between the first two, directly across from each other, and continue repeating the steps using the Spring Hook until all the springs have been installed.




6. With the top rail frame connected in a circle and with the mat installed with all the springs, lay it flat on the floor. Then insert the tapped end of each of the 6 leg tubes into the 6 leg sockets that are facing up as shown.

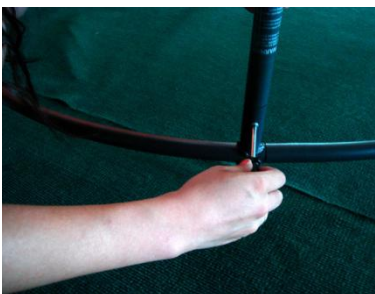

7. Align the screw holes in the leg with the hole in the leg sockets. Then secure with the screw and tighten. **DO NOT OVERTIGHTEN.** Repeat this step until all 6 legs are securely attached to the top rail frame with screws.



8. After attaching all 6 legs securely to the top rail frame, turn the frame over so that the legs point downward as shown.

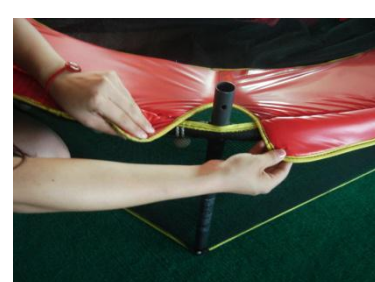

9. Lay the pad cover over the suspension cords. Carefully position each of the 6 openings in the pad cover over the enclosure pole sockets.



10. Align the grommet attached to the lower mesh skirt with the hole.




11. Repeat step 12 with the remaining 5 grommets in the lower mesh skirt and their corresponding legs.



12. Insert the smaller diameter end of an upper enclosure pole into the larger one and align screw holes.



13. Insert screw and tighten. **DO NOT OVERTIGHTEN!** Repeat steps 1-2 to assemble remaining 5 sets of upper and lower poles.

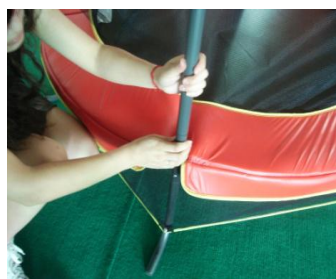

14. Insert the bottom end of enclosure pole assembly into the socket on the frame as shown. Align screw holes.



15. Locate the 6 Nylon patches with grommets that are sewn onto the top edge of the mesh. Slip one of the patches over the top of the enclosure pole so that the grommet is aligned with the screw hole in the pole.




16. Insert the screw and tighten. **DO NOT OVERTIGHTEN.** Repeat the step and finish the remaining 5 patches and poles.



17. Locate the upper and lower sets of hook and loop fasteners sewn to the enclosure mesh



18. Tightly wrap both the upper and lower hook and loop fasteners around the enclosure pole foam to secure the mesh in place. Repeat this with the 5 remaining fasteners.

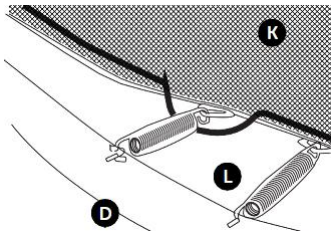

19. To secure the net to the bottom of the trampoline, weave the rope supplied through the bottom section of the net and through each second spring loop. Continue the process around the entire mat and finish by tying the two ends of the rope to respective springs.

Warranty and Contact Details

Kmate Pty Ltd provides a 12 month warranty for this product when used for domestic purposes. This product is not intended for commercial use and any such use will void all warranty.

The benefits of this warranty are provided in addition to other rights and remedies you may have under a law in relation to the goods and services to which this warranty relates. Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

Before making a claim under warranty, please refer to your user/installation manual to ensure that you have followed correct operating procedures of your product, and refer to the trouble shooting section (if such exists) to assist solving any problems.

The warranty period begins from the day of purchase.
Your proof of purchase must be produced before assistance will be provided.

Where the Product is replaced pursuant to this Warranty, the replacement Product will be subject to the warranty terms and warranty commencement date of the original product.

This warranty is only valid if the product is operated and maintained in accordance with the manufacturer's instructions.

Damage to property including but not limited to grass, trees, furniture, carpets, walls, ceilings or any other event either directly or indirectly are excluded from warranty as well as any losses or expenses incurred by you in relation to the product or making a claim under this warranty including without limitation any costs associated with installation, reinstallation or transporting the product.

Foam, springs, mats, nets, or similar perishable parts are not covered under this warranty.

A claim may be refused if the defective claim has arisen for reasons other than a manufacturer's fault or defective parts or workmanship. Circumstances in which a warranty claim may be declined include, but are not limited to the following:

- Normal wear and tear;
- Misuse or abuse, including failure to properly maintain or service;
- Damage caused by improper or incorrect installation, weather, exposure to the elements, UV degradation, are not eligible for warranty repair;
- Insect or vermin infestation;
- Failure to clean or improper cleaning and/or operation of the product;
- Failure to periodically maintain the treadmill;
- If the product is modified without authorisation from Kmate Pty Ltd in writing;
- If you are unable to supply a certificate of compliance for installation of any type as required by State & Territory Laws

Contact Details

Kmate Pty Ltd
PO Box 234, Mount Waverley VIC 3149
Email: warranty@klika.com.au
Phone: 03 9790 0055

