



Twister Trampoline Shade Cover

USER MANUAL



**TRAMPOLINE
ROOF COVER**



Product may vary from the image due to constant improvements. Manual is suitable for multiple models

WARNING: Cover is not designed to be a substitute for sun protection or to be used as a shelter from inclement weather, nor will its use prolong the life of the trampoline.

**Please read these instructions carefully and retain for future reference
FOR DOMESTIC USE ONLY**

Important Warnings

WARNING: DO NOT LEAVE CHILDREN UNATTENDED WHEN USING THIS PRODUCT

CAUTION:

- This product does not offer complete protection against UV and sun exposure. When using this product and the trampoline ensure the users are wearing appropriate attire and sunscreen to sufficiently protect against the sun.
- Do not leave children unattended under the cover as the temperature between the cover and the trampoline may increase very rapidly depending on the outdoor temperature and sun.
- The product is not waterproof.
- Remove the cover when not in use. Avoid leaving it on the trampoline in rain and windy weather to minimize the damage to the cover and the trampoline, through sagging, colour fading and deterioration of material.
- We recommend the use of anchor kits (optional accessory) to minimize the likelihood of strong winds tipping over the trampoline causing damage.

PARTS

Size	Part A (Connector)	Part B (Fiberglass Rod)	Part C (Metal Ring)	Part D (Cable Tie)
8FT	6	6	6	6
10FT	8	8	8	8
12FT	12	12	12	12
14FT	12	12	12	12



Step 1 –Assembling Cover Frame

- Unroll the cover material and place it external side (orange stitching) facing down on a clean surface to avoid it being marked.



- Carefully insert the Fiberglass Rods (Part B) into the internal webbing straps of the cover as shown below.




- Using Connectors (Part A) connect all Fiberglass Rods (Part B) forming a complete frame.



Step 2 - Attaching the cover to the trampoline

- Positioning yourself outside the trampoline, locate the basketball set pole (marked as Upper Net Pole Type B in the Kahuna trampoline manual) on the trampoline. Basketball sets are supplied separately.

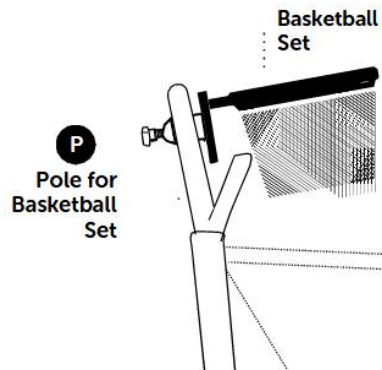

- Using a ladder place the formed cover frame on top of the trampoline, ensuring the opening in the cover is positioned over Pole Type B and slip the skirt around the gap of the Pole Type B for the basketball set, as shown in the below diagram.



- Align the vertical orange stitching on the cover with the trampoline poles.
- The basketball set (where supplied) is to sit outside the cover.

Step 2A - Fixing the cover to the trampoline using orange net loops

- *Trampoline net is equipped with Orange Loops (positioned around the vertical poles) If the roof is not equipped with orange loops proceed to Step 2B.*
 - If your trampoline net was supplied with orange loops sewn to the net, in the proximity of the vertical poles, locate all the loops and feed the black roof straps through the loops.
 - Securely fasten the black roof straps to the orange net loops and tie them around the poles.





- Working your way around the trampoline, repeat the steps for every roof corner, orange net loop and vertical pole.

Step 2B – Fixing the cover using cable ties and metal rings*(if your trampoline net is not equipped with sewn on orange loops)*

- Your roof cover is supplied with a set of metal rings (Part C) and cable ties (Part D). Locate them.
- Position the cover and its frame correctly on the trampoline. Pull down the corners of the cover, down the poles, as far as they will go.
- Measure approximately 10 cm below the end of the corner of the cover.
- Identify which holes in the trampoline net are positioned the closest around the vertical pole of the trampoline, and feed the cable tie through the net holes (approximately 10 cm below the corner of the roof cover).
- **IMPORTANT:** Before securing the cable tie, position the metal ring on the outside of the pole (as shown in the below image) and feed the cable tie through the metal ring, and only then fasten it, ensuring the metal ring is facing away from the trampoline pole.



- Tie the straps sewn to the cover to the metal ring and around the pole.
- Working your way around the trampoline, repeat the steps for every roof corner and vertical pole.
- Ensure the roof is well secured to the metal rings and sits snugly on the trampoline.

NOTE: Net straps should be securely fixed to the orange net loop or metal rings (depending on the method used). If the roof cover is loosely attached, it may result in the roof cover sliding on the poles and damaging the trampoline, which will void all warranty.

Step 3 – Detaching the roof from the trampoline

- Untie the roof straps from the orange net loops or metal rings (depending on the method used to attach the roof).
- Place the roof in a dry and well protected area, away from the elements.

Warranty and Contact Details

Kmate Pty Ltd provides a 12 month warranty for this product when used for domestic purposes. This product is not intended for commercial use and any such use will void all warranty.

The benefits of this warranty are provided in addition to other rights and remedies you may have under a law in relation to the goods and services to which this warranty relates. Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

Before making a claim under warranty, please refer to your user/installation manual to ensure that you have followed correct operating procedures of your product, and refer to the trouble shooting section (if such exists) to assist solving any problems.

The warranty period begins from the day of purchase.
Your proof of purchase must be produced before assistance will be provided.

Where the Product is replaced pursuant to this Warranty, the replacement Product will be subject to the warranty terms and warranty commencement date of the original product.

This warranty is only valid if the product is operated and maintained in accordance with the manufacturer's instructions.

Damage to property including but not limited to trampoline, garden, landscaping or any other event either directly or indirectly are excluded from warranty as well as any losses or expenses incurred by you in relation to the product or making a claim under this warranty including without limitation any costs associated with installation, reinstallation or transporting the product.

Light globes, remote controls, batteries, flywheel belts and chains, filters or similar perishable parts are not covered under this warranty.

A claim may be refused if the defective claim has arisen for reasons other than a manufacturer's fault or defective parts or workmanship. Circumstances in which a warranty claim may be declined include, but are not limited to the following:

- Normal wear and tear;
- Failure by the user to periodically clean the cover by removing the debris and pooled water;
- Colour and material fade;
- Rotting and degradation of material due to water
- Cuts, holes and perforations in the material
- Misuse or abuse, including failure to properly maintain or service;
- Damage caused by improper or incorrect installation, force-majeure, electrical surges, lightning, power grid fluctuations, water or by connection, are not eligible for warranty repair;
- Insect or vermin infestation;
- Failure to clean, or improper cleaning and/or operation of the product;
- If the product is disassembled or modified without authorisation from Kmate Pty Ltd in writing;
- If you are unable to supply a certificate of compliance for installation of any type as required by State & Territory Laws

Contact Details

Kmate Pty Ltd
PO Box 133, Braeside VIC 3195
Email: warranty@kahuna.com.au
Phone: 03 9790 0055